



1. Name of the product

NENKO Interactive bubble unit 175x15 cm

2. Product code

19779095

3. Color


As shown

4. Short description

Bubble units are essential in any multisensory area.

Our bubble units are:

- visually attractive due to the changing, colored light
- soothing due to the movement of the bubbles
- relaxing due to the heat and vibration of the tube
- maintenance-friendly by LED lighting

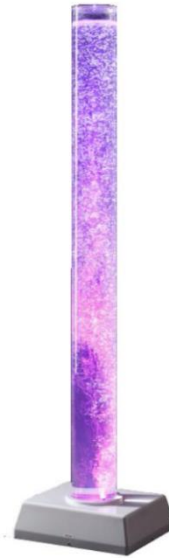

The bubble units are equipped with a 12 Volt transformer, LED lighting and white, rectangular base. Compatible with the NENKO interactive switching panel (to be ordered separately). About 25 liters of water goes into this bubble unit.

5. Content

1x bubble tube

1x foot

(excluding safety bracket for bubble unit)

6. Sensory stimulations

Sight

7. Commissioning

- Before the bubble unit can be put into use, it must be on a fixed, non-oblique surface.
- Unpack the bubble unit carefully.
- By filling 1/2 liters of demineralized water, check whether the hose connection and the bubble unit are waterproof.

8. Technical information

- **Size bubble unit :** 175 x 15 cm
- **Base dimensions:** 43 x 35 x 12.5 cm





9. Installation

- The bubble unit can only be used indoors.
- Make sure that the bubble unit cannot be knocked over.
- Fill the tube up to a maximum of 40 mm from the top edge.
- Please note! When filling, no water should run out from under the bubble unit.
- The plexiglass tube should only be cleaned with a damp cloth (do not use detergent!)
- Due to evaporation of the water, it is normal to refill the tube regularly.
- Over time, the water may become cloudy, then empty the entire tube, thoroughly clean it and fill again.

Regulation of the air quantity

On the back of the bubble unit there is a button, with this button the amount of air can be determined. To reduce the bubbles, turn the clockwise knob. To increase the bubbles, turn counterclockwise. If you want to turn off the bubble unit for a longer period of time, turn this button off completely.

10. Fix possible problems

Despite careful assembly and control, it may happen that the bubble unit is not waterproof. Before commissioning, check the bubble unit for damage. The bubble unit may only be used under supervision. Check regularly that there is no water running out of the bubble unit or behind the check valve. The manufacturer is not liable for any water damage caused by the bubble unit. In case of complaint, please hand over the original invoice and serial number.

11. Related products (to be ordered separately)

NENKO interactive switching panel - 22009112

In combination with the use of the Nenko wireless switch panel, you check the color in the room and control the bubbles of the bubble unit. Make the Nenko bubble units, LED light tubes, light source for fiber mist, depth mirror, LED orb and LED strips interactive by means of this switch panel.



For more information you can visit our website www.nenko.com.

